



iTePower


Manual Working Platform

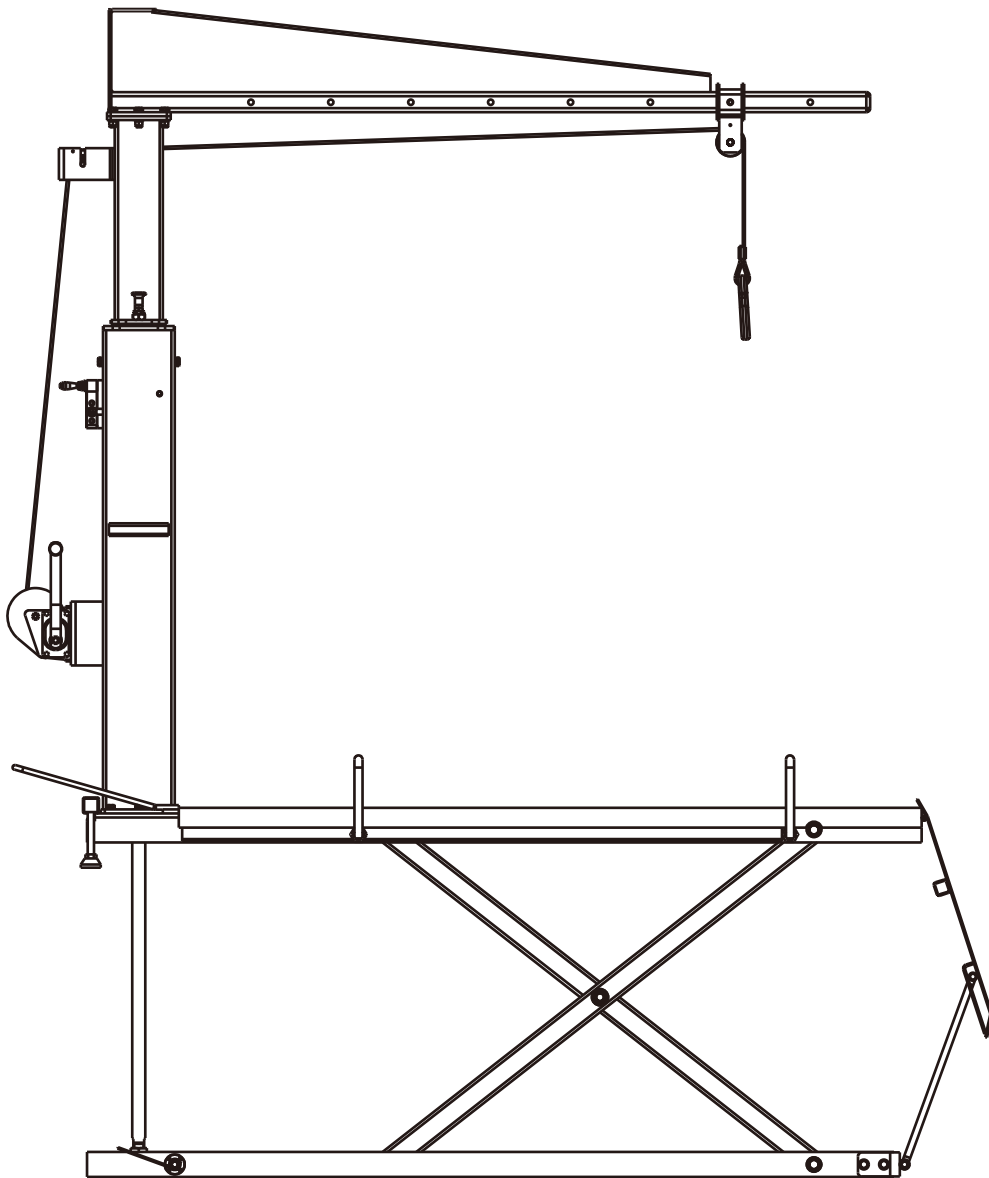

Datasheet

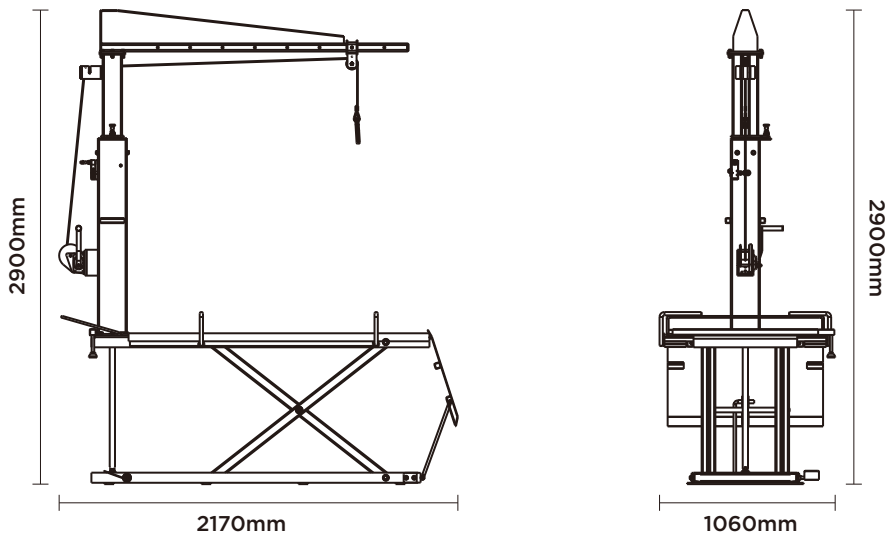


Working Platform	ITCWB400
Platform size	1860x1000 mm
Platform Max. height	900 mm
Platform lifting weight	400 kg (@ 8 bar)
Hoisting weight	180 kg
Product overall size	2170*1060*2900 mm (L*W*H)
Product weight	420 kg
Package size (veneer box)	2200*1080*550 mm (L*W*H)
Total weight	470 kg
FLC (20/40HQ)	20 / 44 PCS

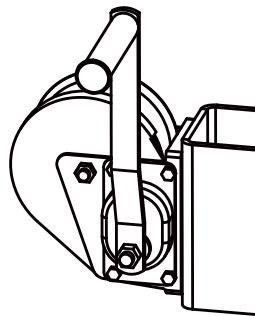

Hand Winch	RBW2500
Character	Autobrake
Lifting Weight	2500lbs (1135kgs)


Main parts

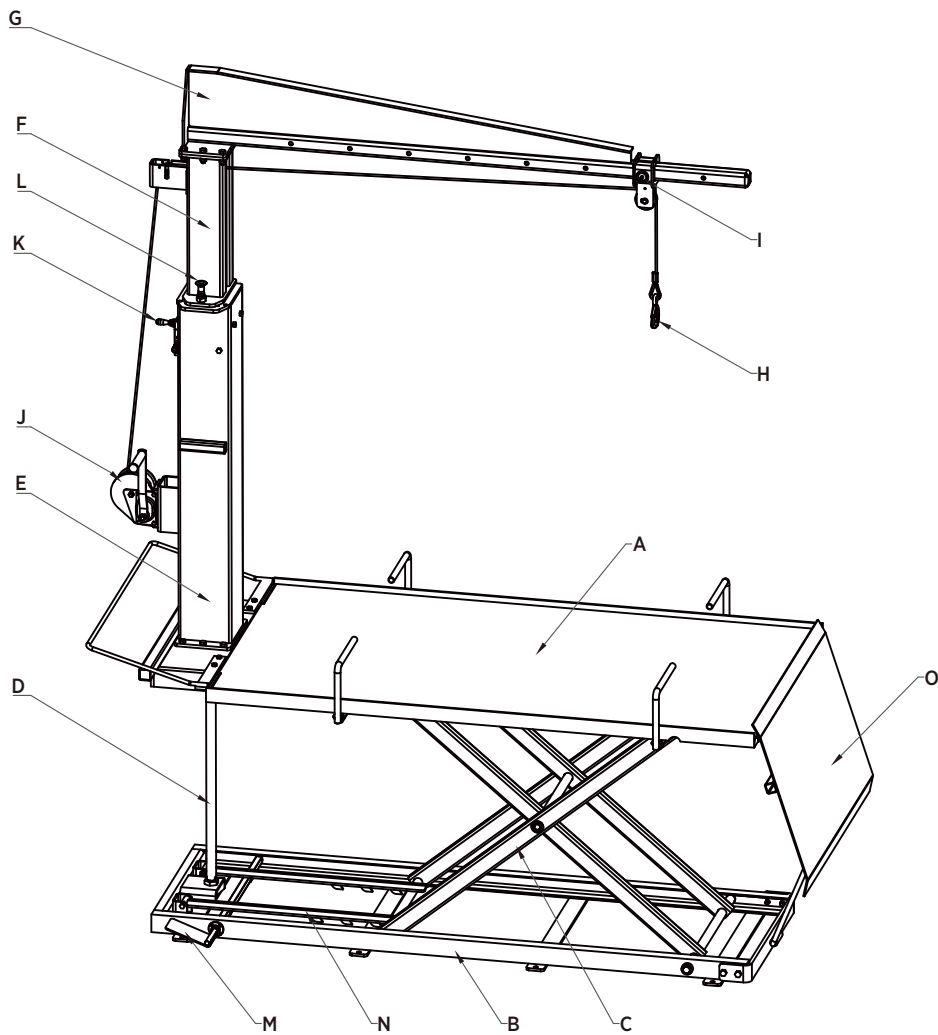

No.	Parts name	Function
A	Platform	Working platform
B	Base frame	Fixed to the ground
C	Cross lifting lever	Support the platform
D	Pneumatic lifting poker	Lift the platform
E	Main mast	Support the lifting arm
F	Rotatable mast	Allow the lifting arm to rotate
G	Lifting arm	Lift the cargo
H	Lifting hook	Lift the cargo
I	Lockpin	Lock the pulley
J	Hand winch	Lift the cargo
K	Pneumatic valve	Air supply valve
L	Spring Lockpin	Lock the rotatable mast
M	Footboard	Lock or release the cross lifting lever
N	Brake rods	Lock or release the cross lifting lever
O	Ramp plate	Help to move the cargo on/off to the platform


1-1 Assembly Step

Lift and lock the platform

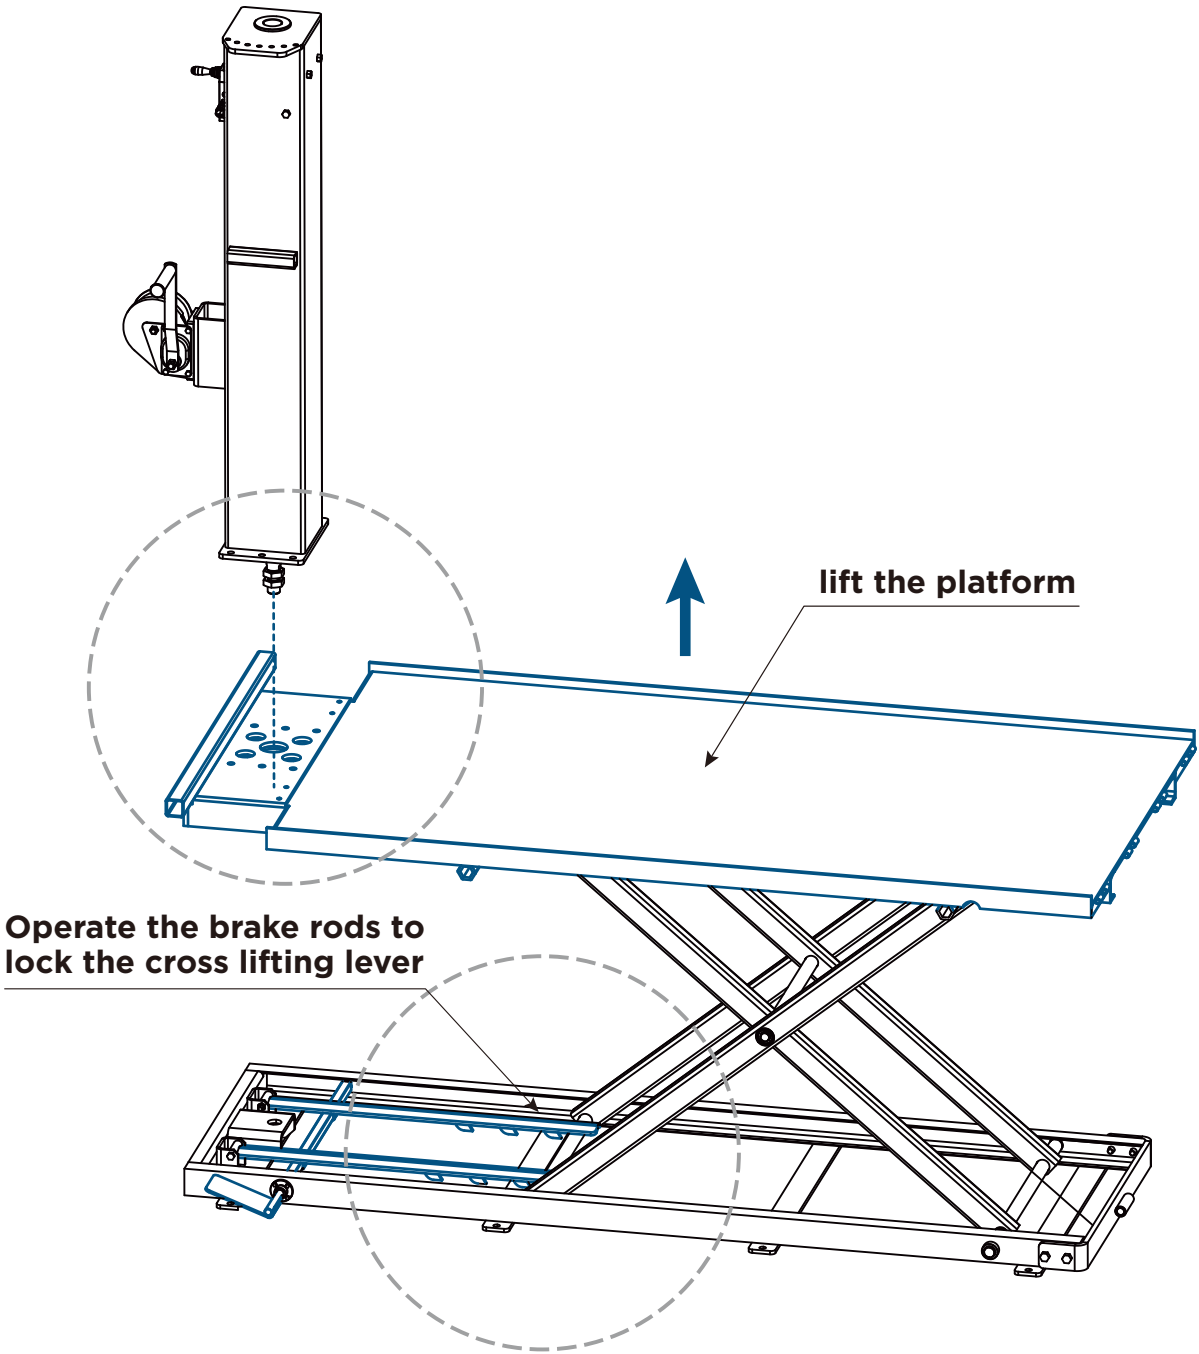


1-2 Assembly Step

Assemble the main mast and the Rotatable mast

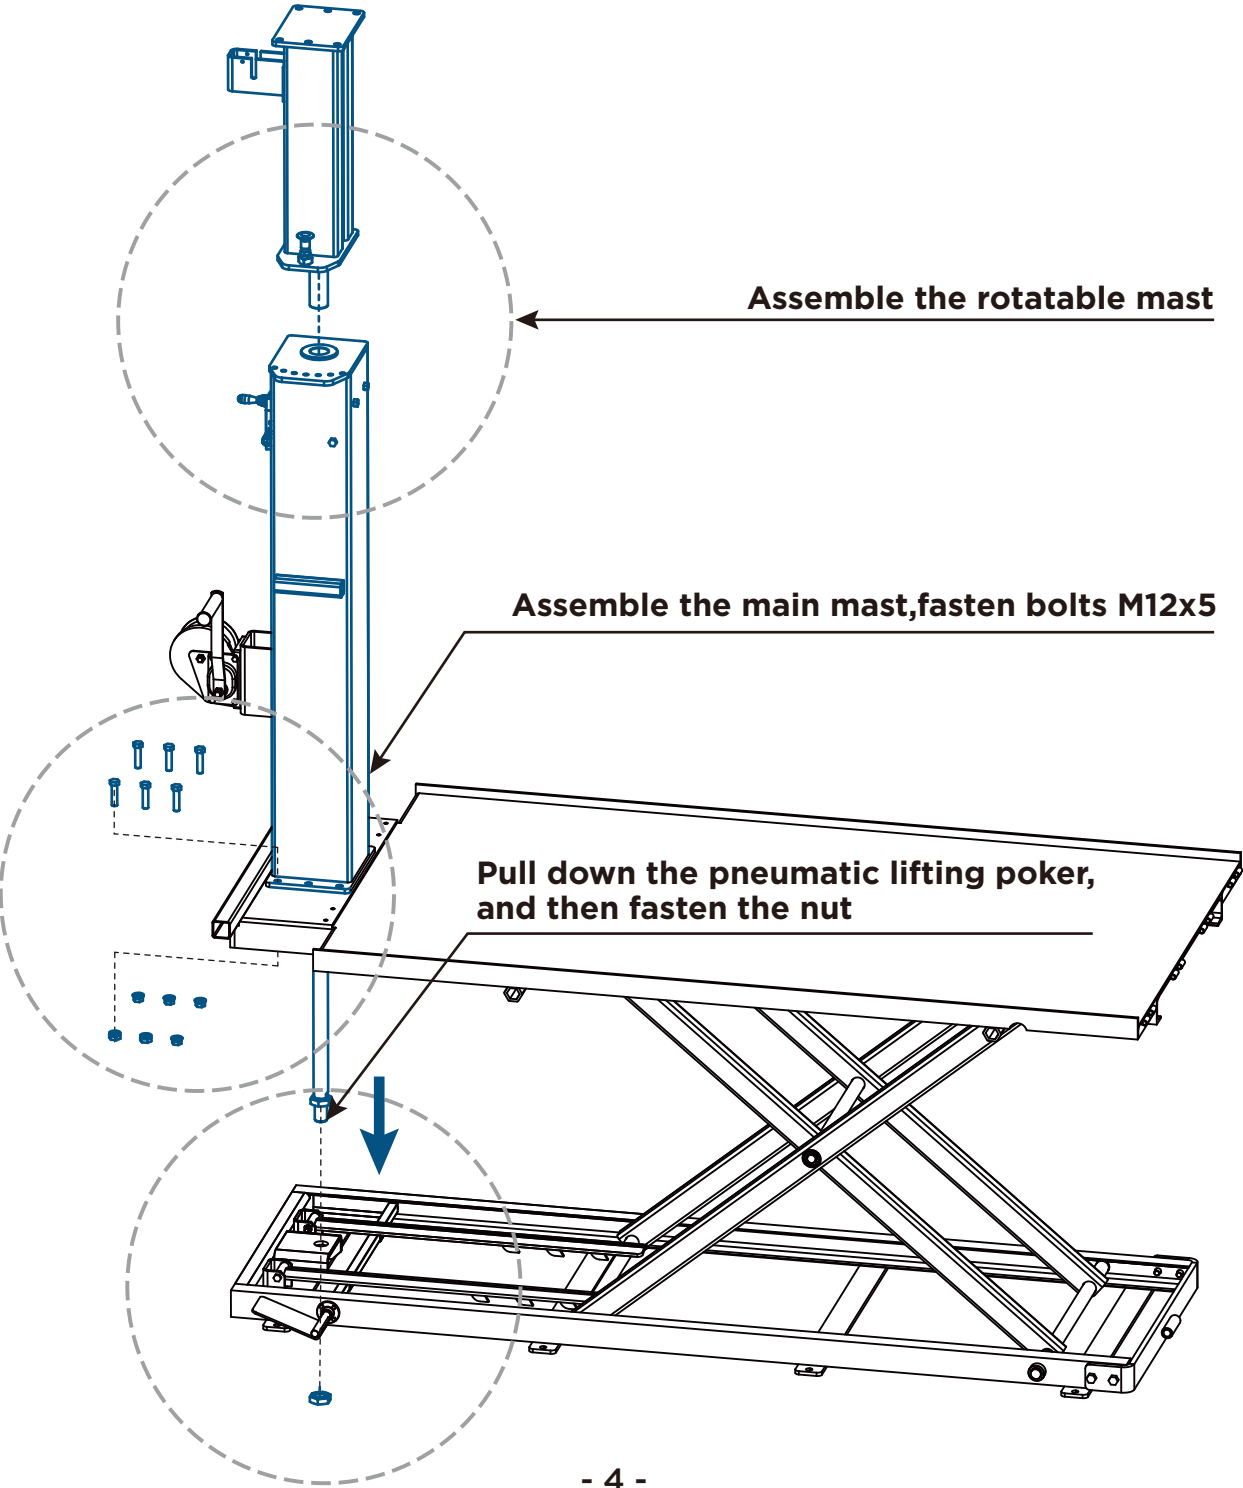


1-3 Assembly Step

Assemble the lifting arm

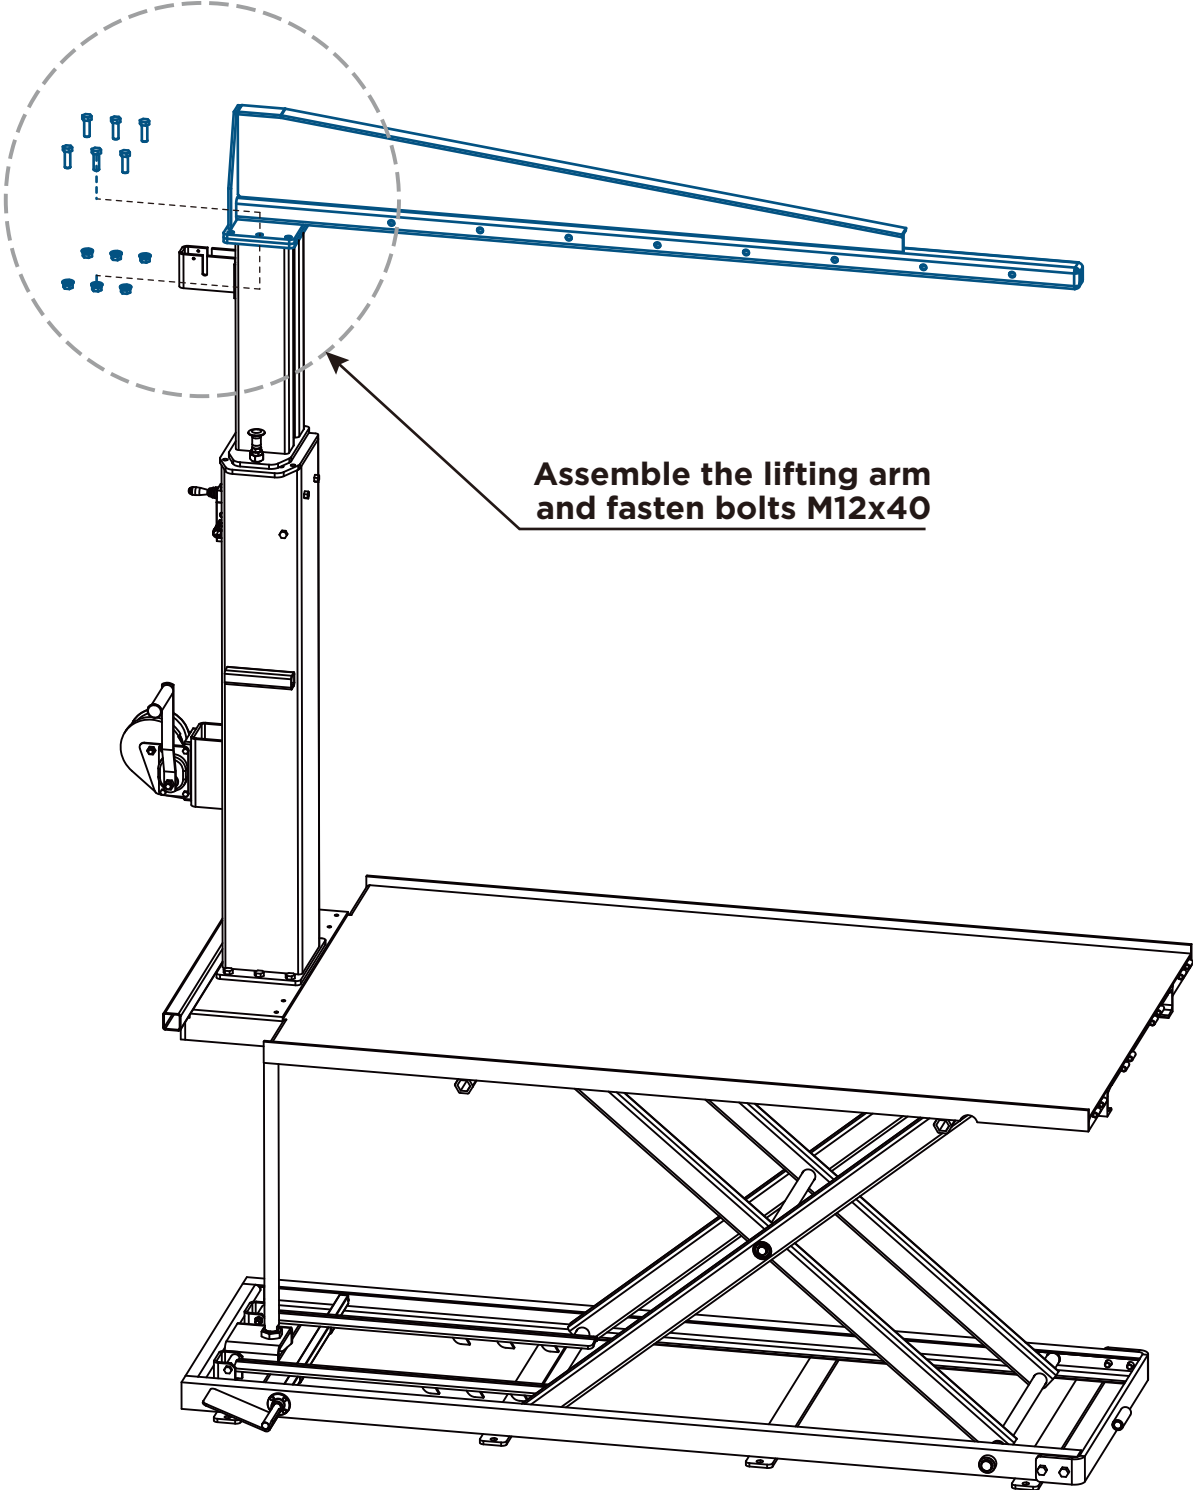


1-4 Assembly Step

Assemble the hand winch and the steel cable

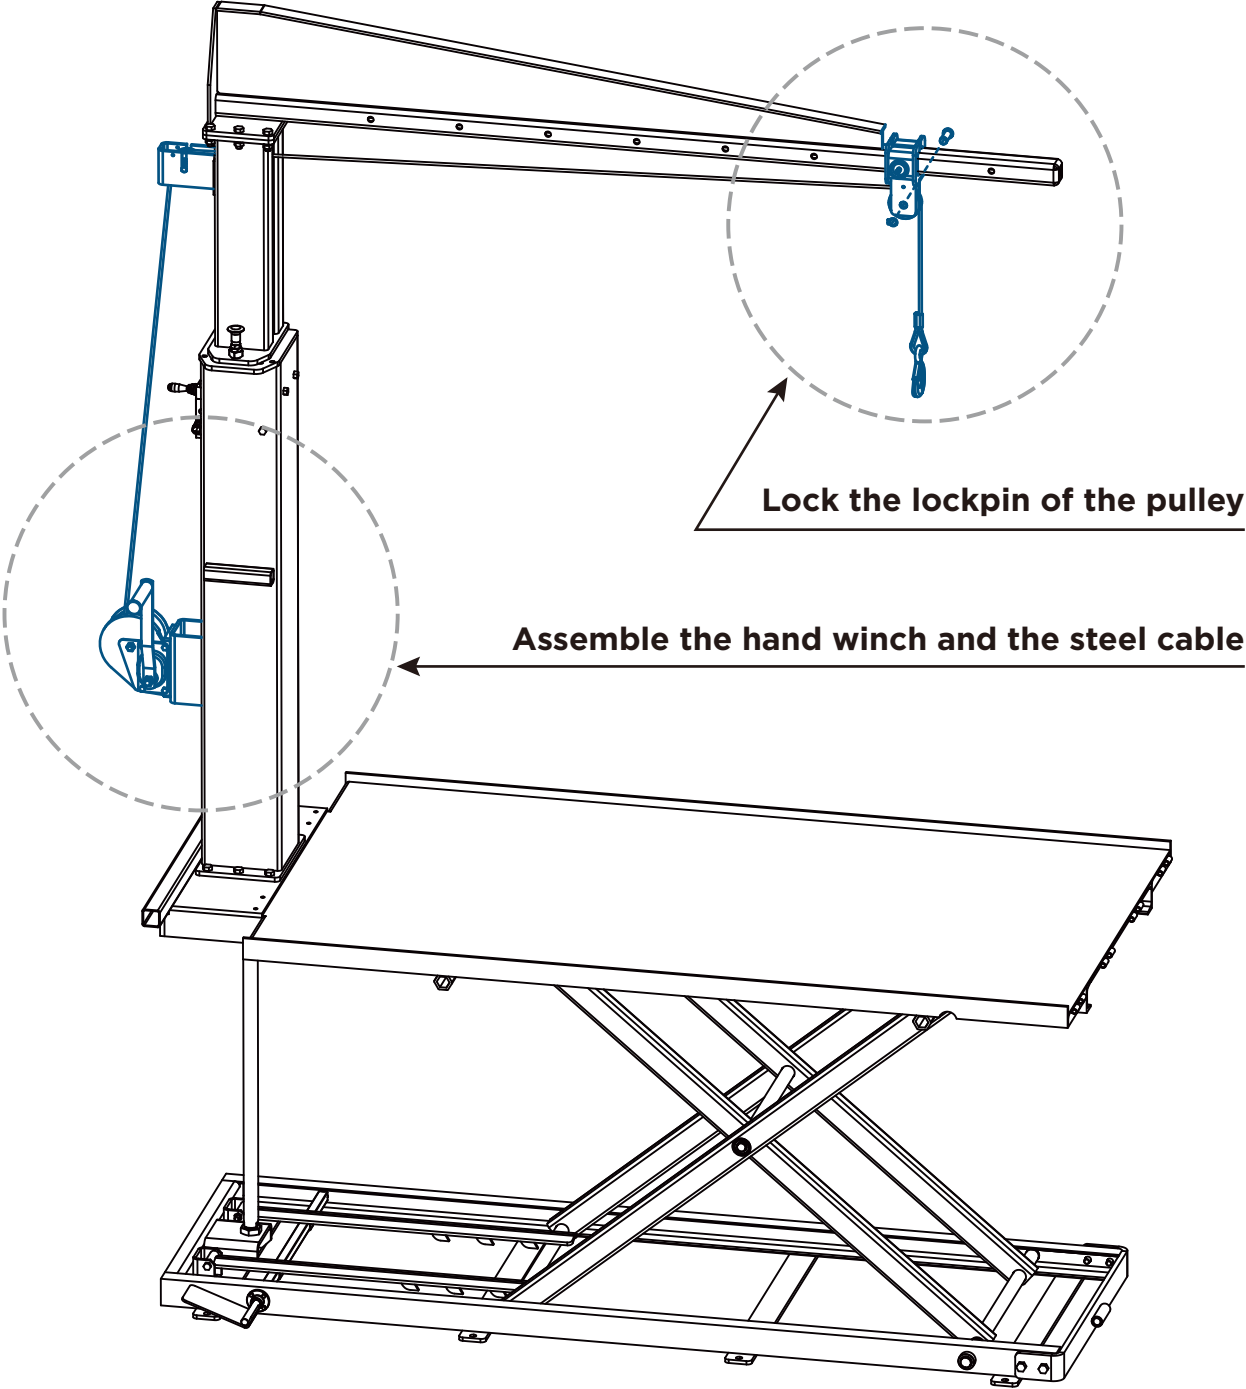


1-5 Assembly Step

Assemble the ramp plate

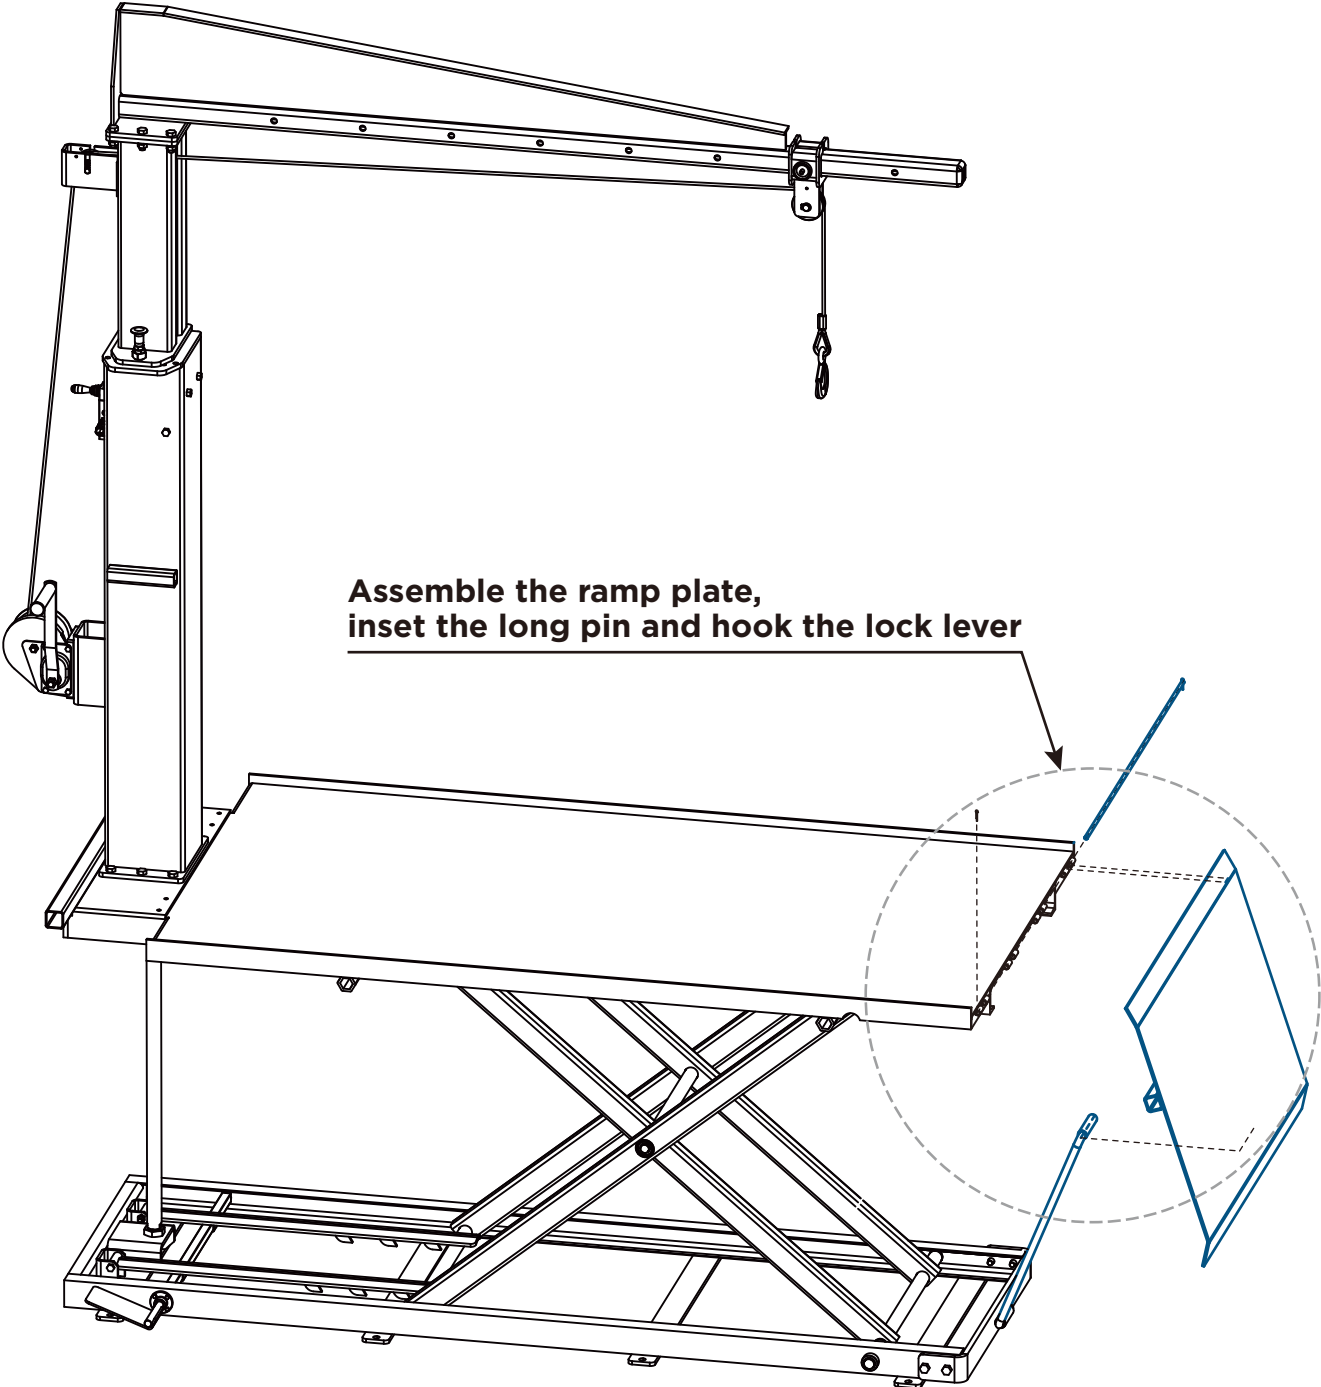


1-6 Assembly Step

Assemble the safety lever , the fixed lever and the standing leg

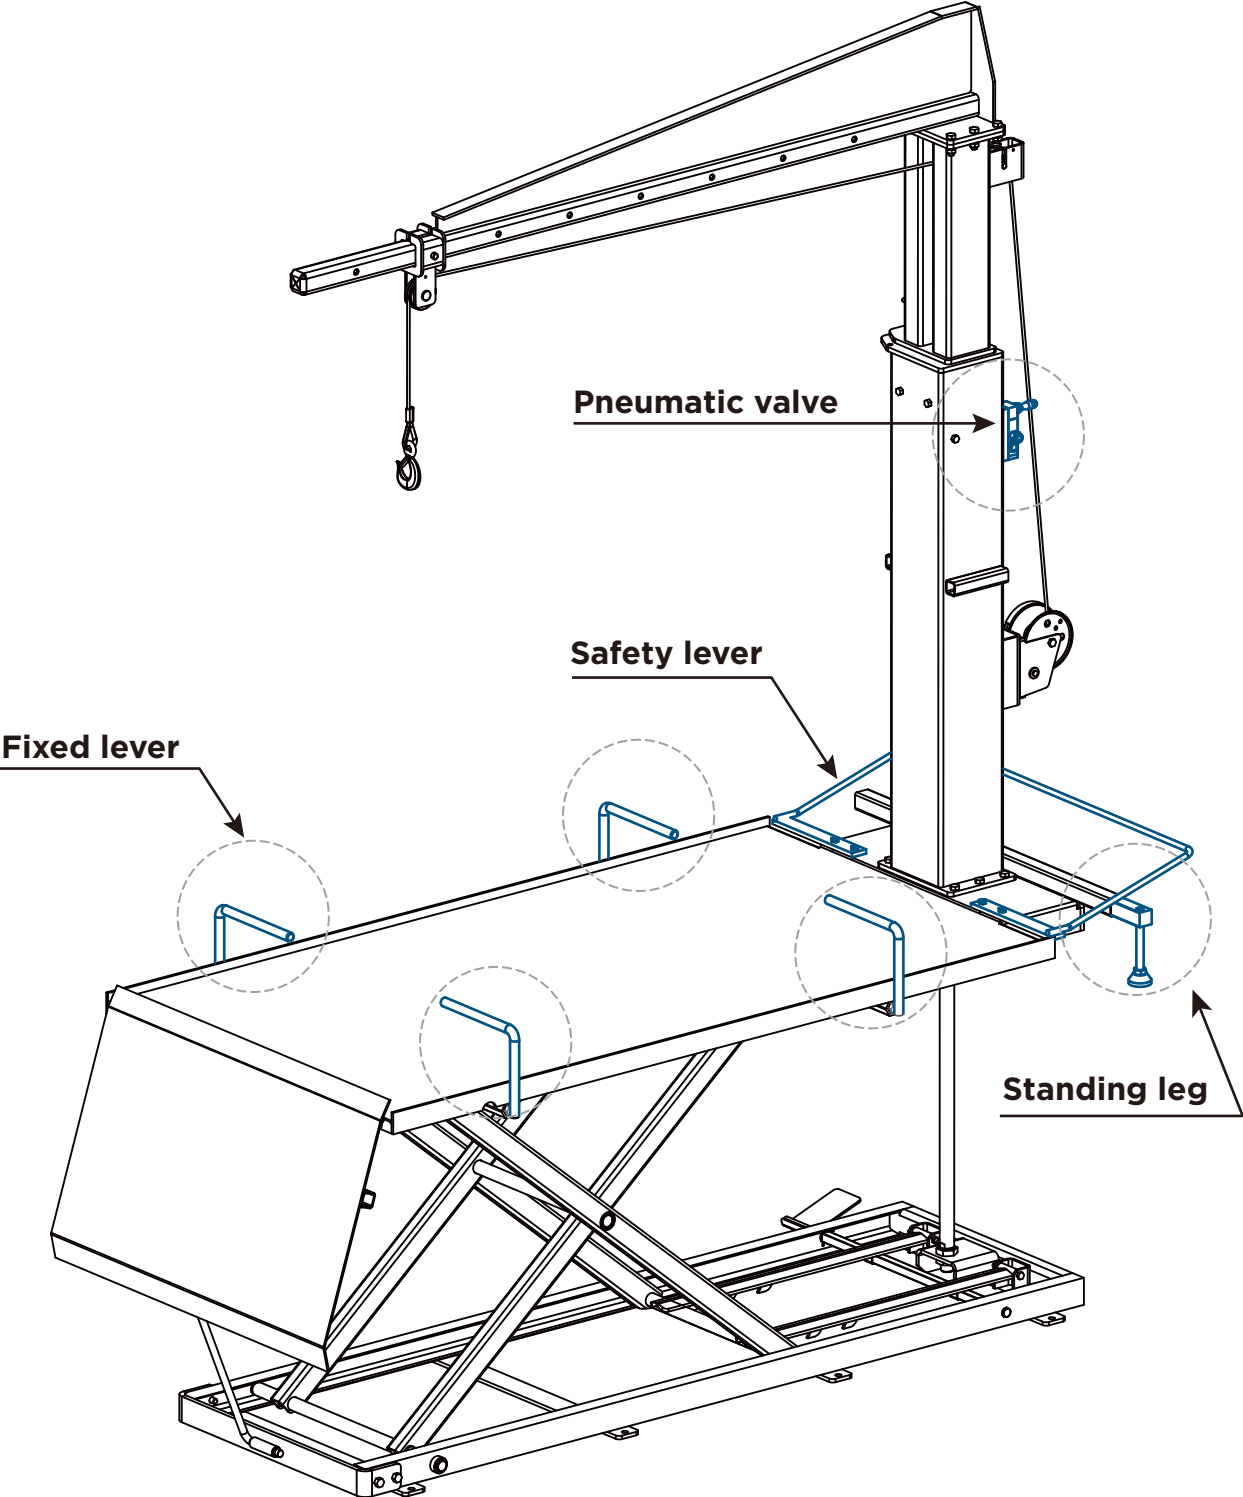


1-7 Assembly Step

Fix to the ground

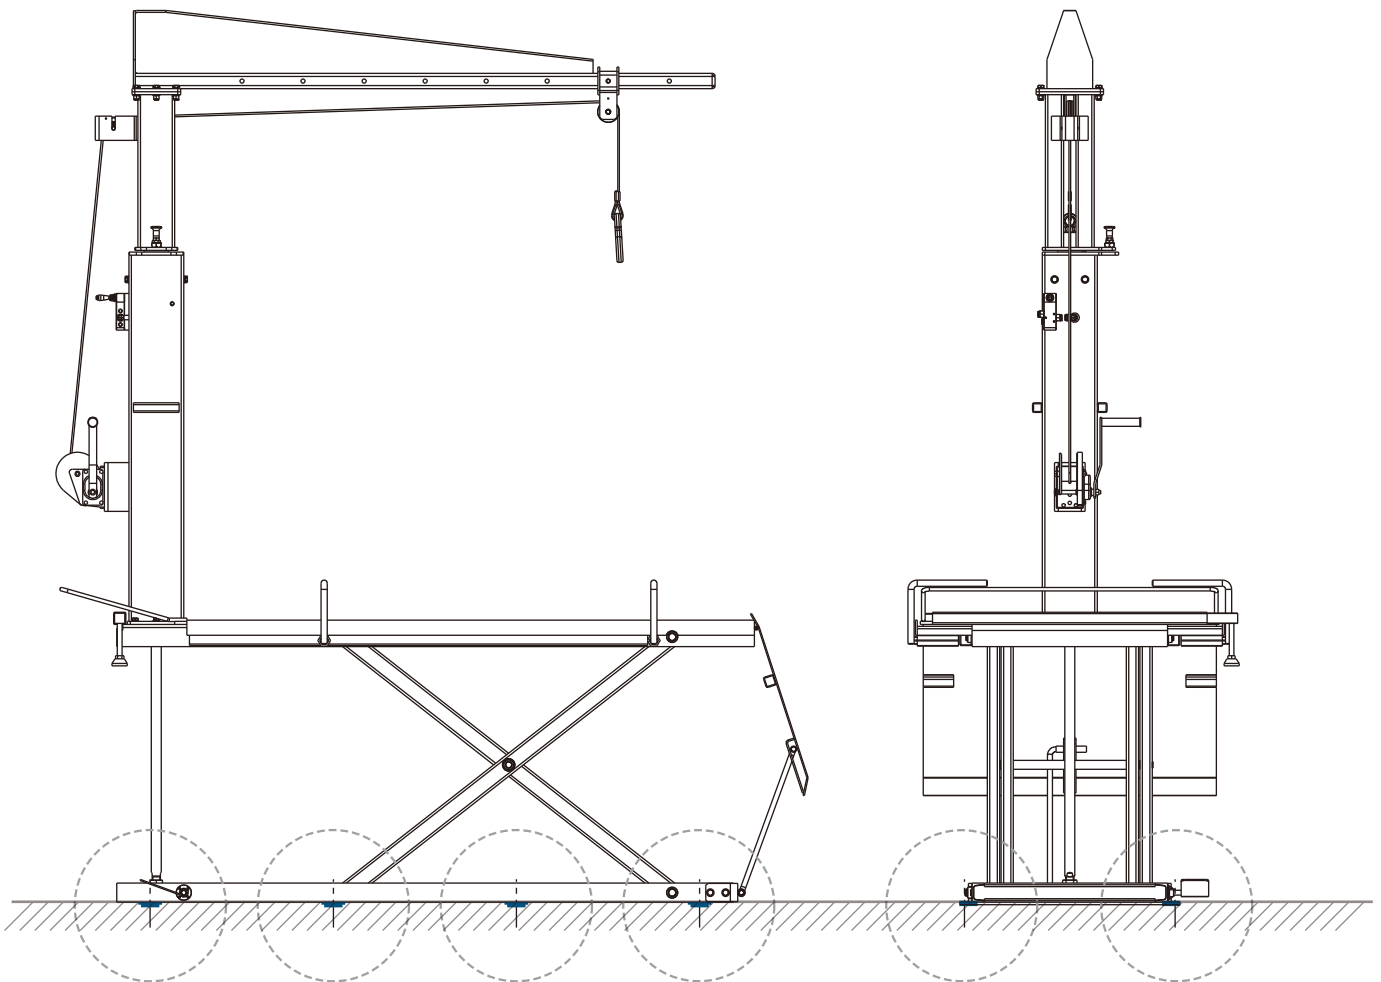


Fix the working platform to the ground with bolts M10

2 Lift and drop operation

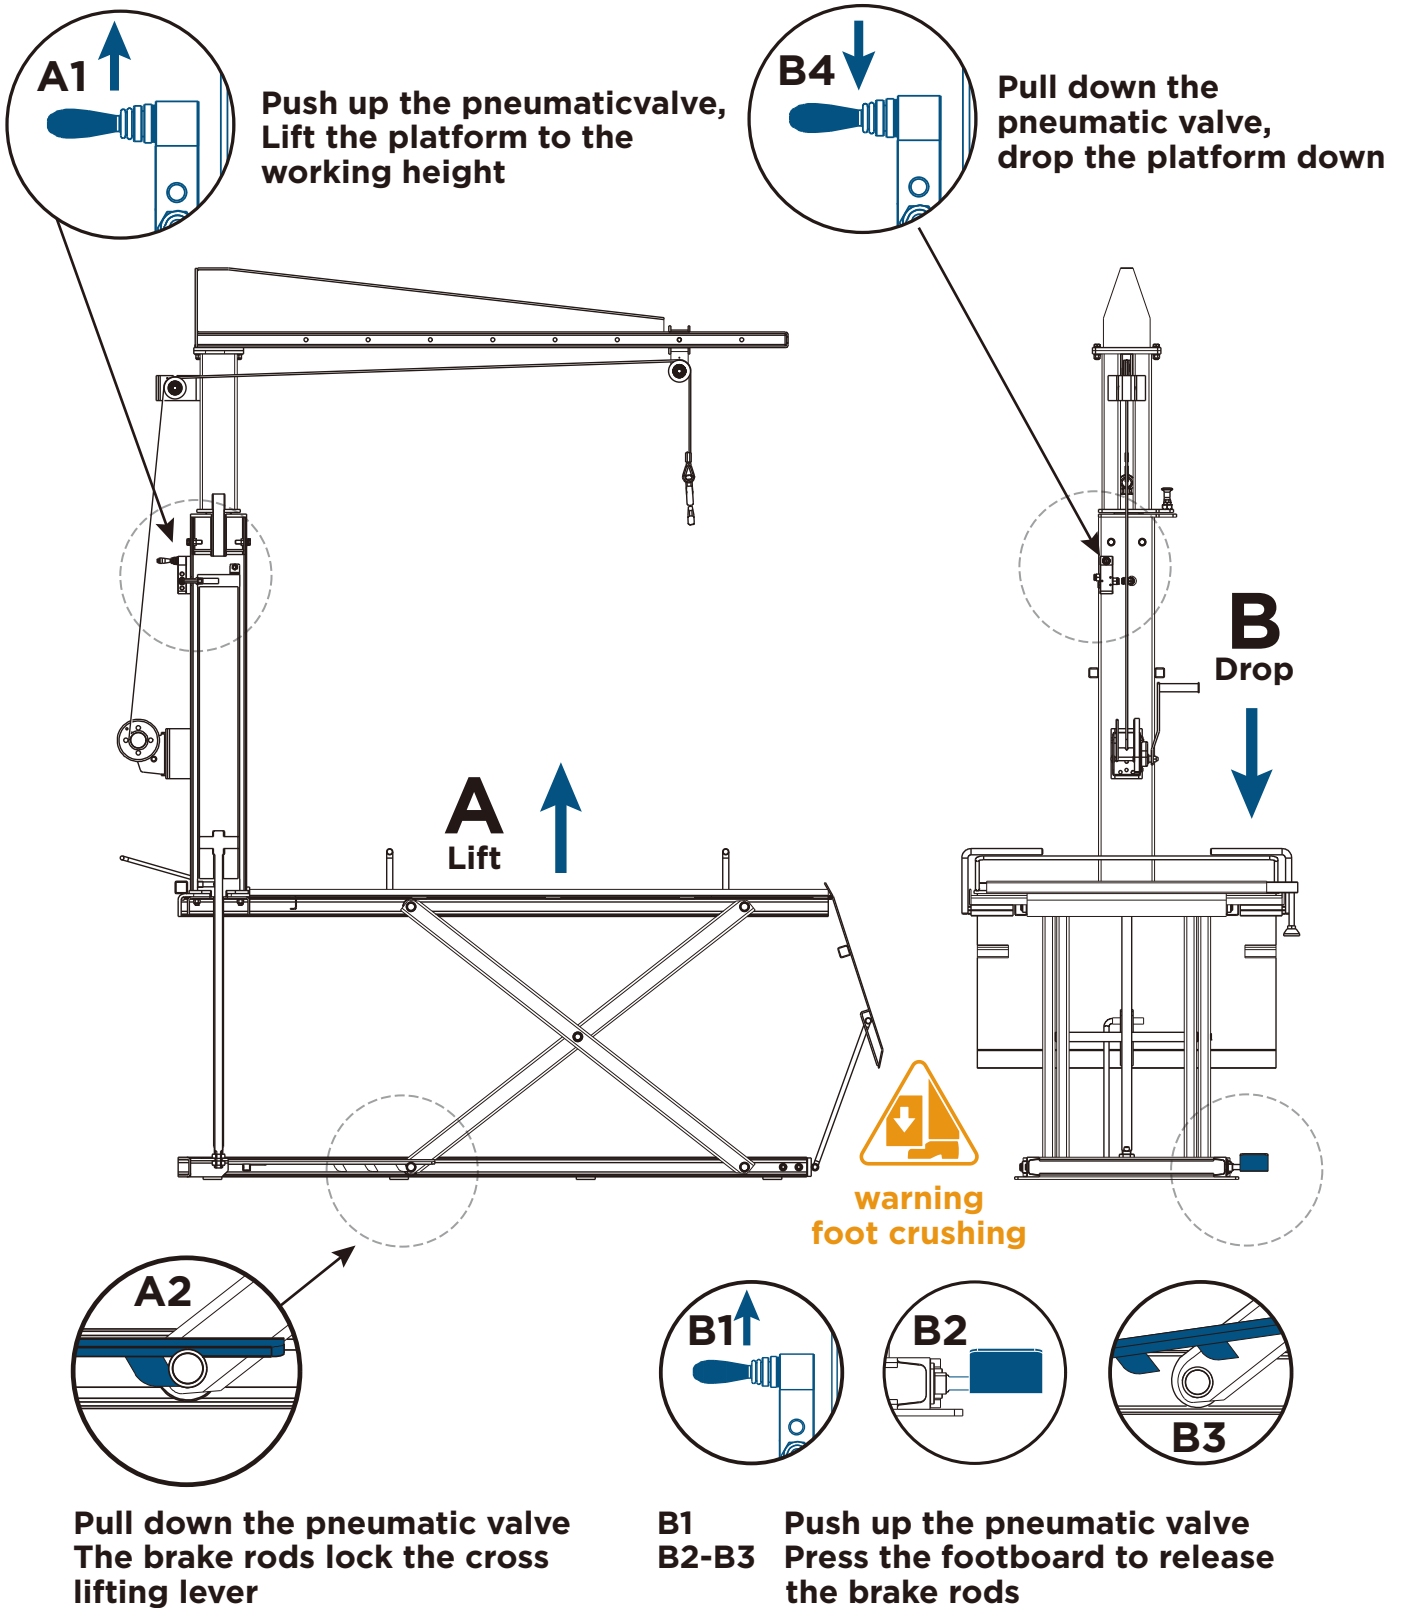

3 Lift the workpiece

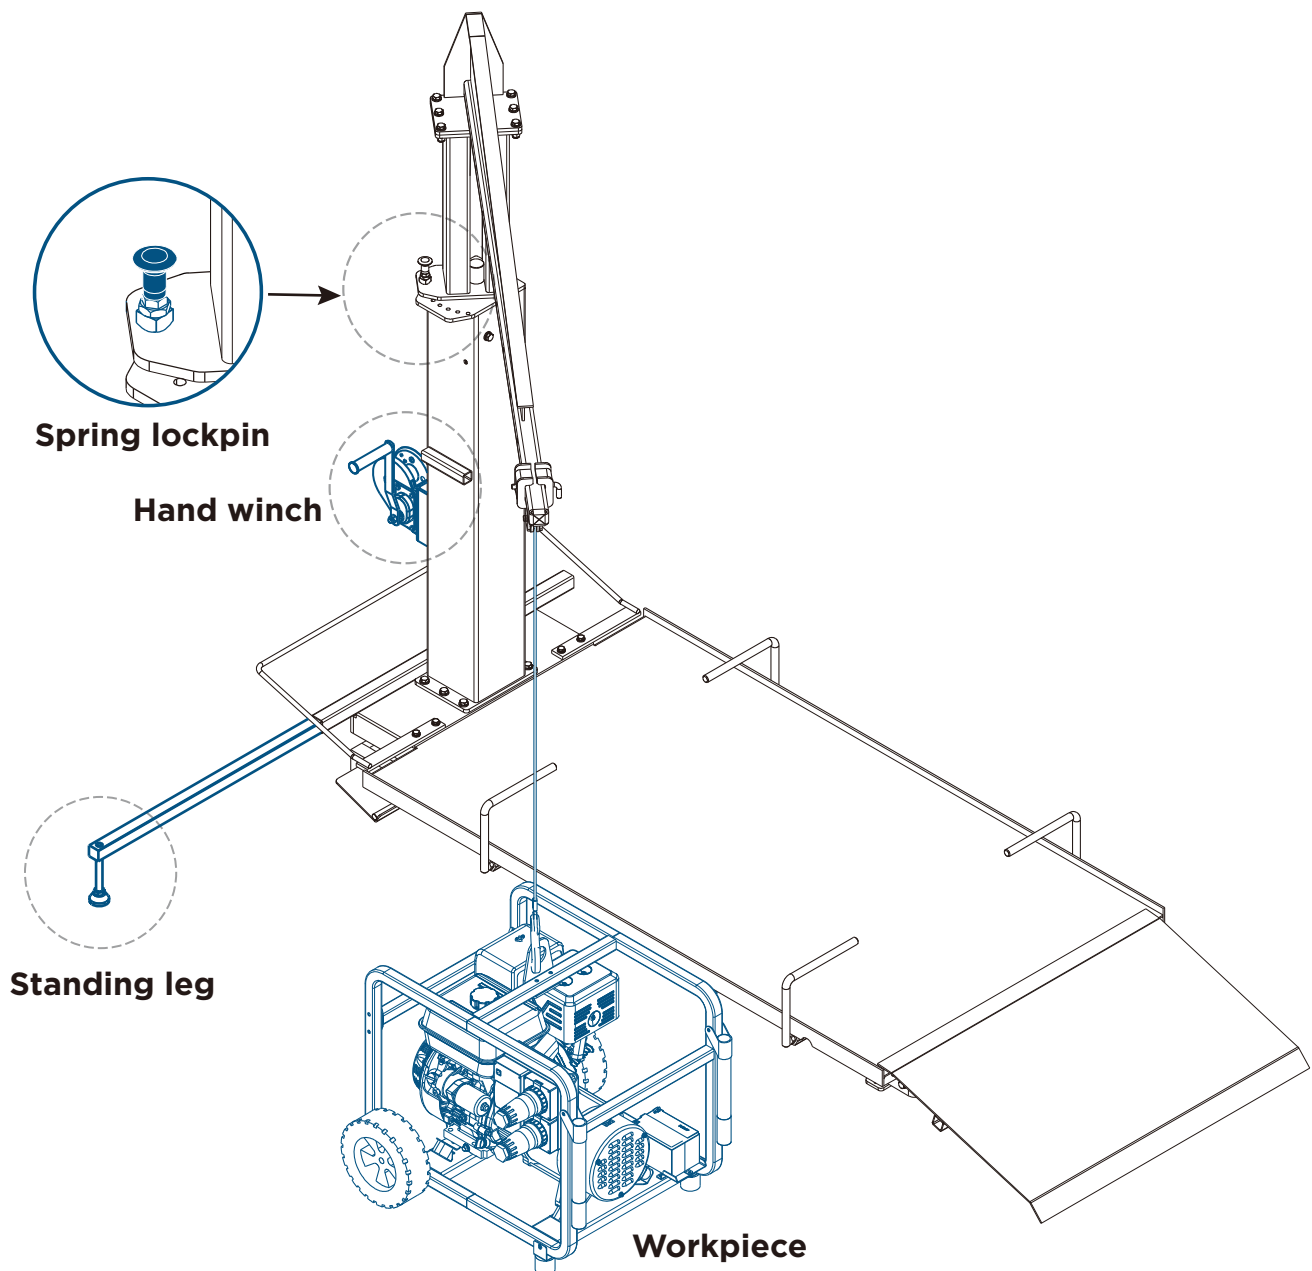

1. Drop the platform to the lowest position
2. Pull out the standing leg, and the standing leg touch against the ground
3. Pull out the spring lockpin, and then rotate it.
4. Rotate the lifting arm and hook the workpiece
5. Operate the hand winch, lift the workpiece to the platform
6. Release the spring lockpin and lock the rotatable mast, get back the standing leg

iTePower